

Oppsett av Zebra etikettskriver


Denne guiden beskriver hvordan man setter opp en Zebra etikettskriver for bruk med Edipost. I denne guiden ble det benyttet en Zebra TLP 2844 på Windows 8.1.

Instruksjoner


Standardinnstillingene etter installasjon av drivere angir en etikettstørrelse på 102mm x 152mm. Edipost krever en etikettstørrelse på 102mm x 192mm, og derfor vil man oppleve klipping som vist nedenfor.



For å sette riktig etikettstørrelse går man først til Kontrollpanel, og så Enheter og Skrivere. Høyreklikk på Zebra-skriveren og velg egenskaper

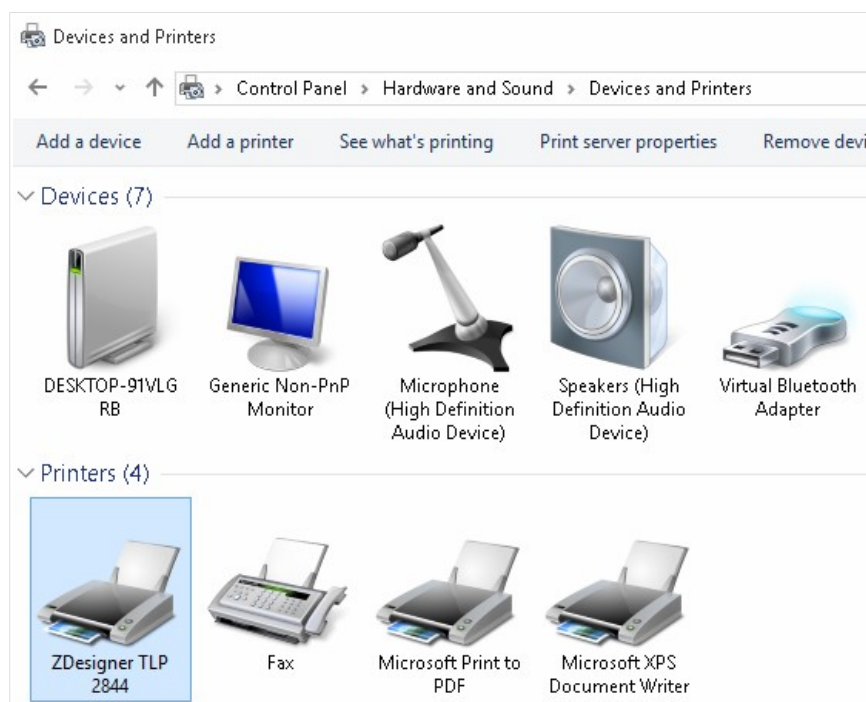

Inne på egenskaper settes formatet til millimeter, teipens bredde til 102mm og teipens høyde til 192mm. Trykk OK og teste en ny utskrift fra Edipost.

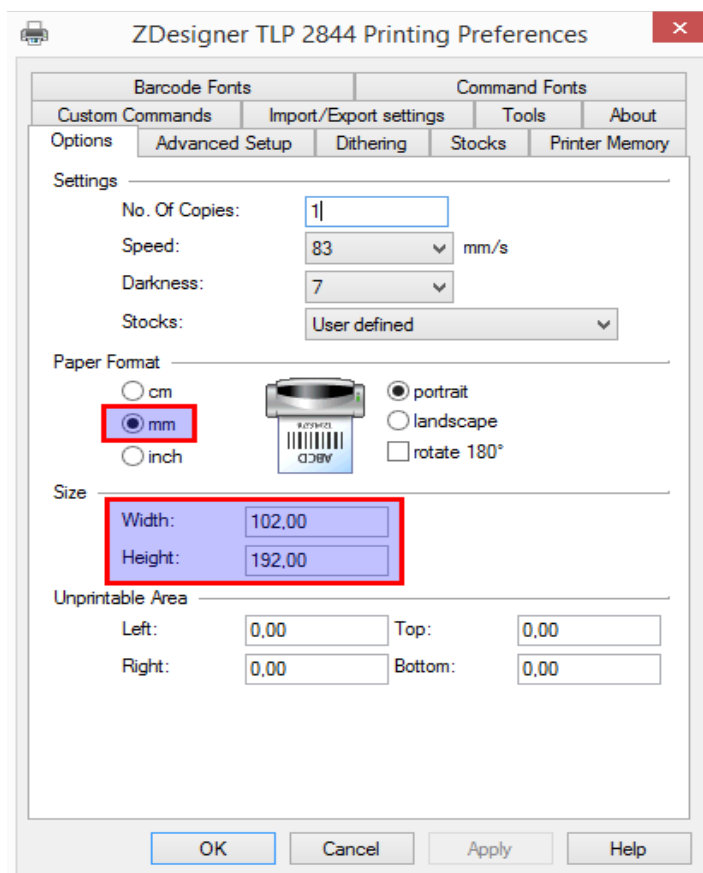

The image shows the 'ZDesigner TLP 2844 Printing Preferences' dialog box. It has a title bar with a printer icon and a close button. The dialog is divided into several tabs: 'Barcode Fonts', 'Command Fonts', 'Custom Commands', 'Import/Export settings', 'Tools', 'About', 'Options', 'Advanced Setup', 'Dithering', 'Stocks', and 'Printer Memory'. The 'Options' tab is selected. Under 'Settings', there are fields for 'No. Of Copies' (1), 'Speed' (83 mm/s), 'Darkness' (7), and 'Stocks' (User defined). The 'Paper Format' section has radio buttons for 'cm', 'mm' (selected and highlighted with a red box), and 'inch'. There are also options for 'portrait' (selected), 'landscape', and 'rotate 180°'. The 'Size' section has fields for 'Width' (102,00) and 'Height' (192,00), both highlighted with a red box. The 'Unprintable Area' section has fields for 'Left', 'Right', 'Top', and 'Bottom', all set to 0,00. At the bottom are buttons for 'OK', 'Cancel', 'Apply', and 'Help'.

Section	Parameter	Value
Settings	No. Of Copies	1
	Speed	83 mm/s
	Darkness	7
	Stocks	User defined
Paper Format	cm	☐
	mm	☒
	inch	☐
	rotate 180°	☐
Size	Width	102,00
	Height	192,00
Unprintable Area	Left	0,00
	Right	0,00
	Top	0,00
	Bottom	0,00